

INSTRUCTION MANUAL

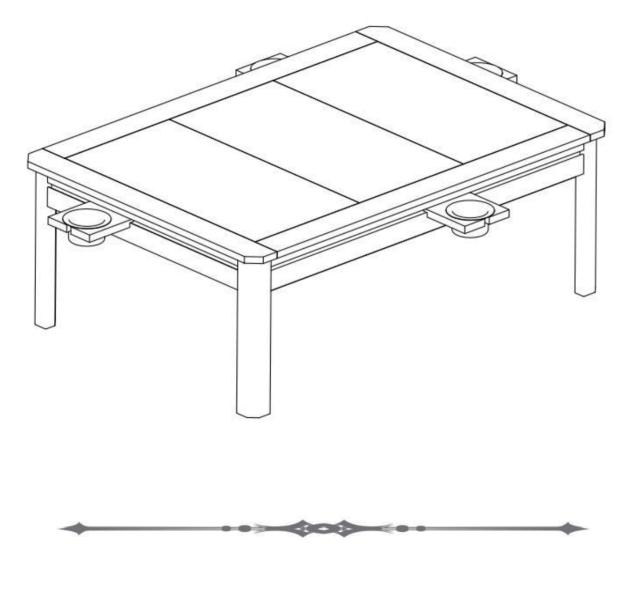

READ THIS FIRST!ASSEMBLY TIPS:

- To avoid scratches, build ona carpeted surface or blanket.
- ·When tightening screws with the Allen key -use the long side first, then tighten with the short side.
- The long side of the Allen key can be used AT AN ANGLE!This makes it easier to screw bolts deeper inside rail.
- Bolts can be attached to the end of the long side of the Allen key. Once they are attached to the end you can guide them to the holes.

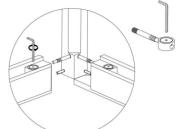

- If a step uses a nut:use the wrench to hold the nut in place and the Allen key to tighten the bolt.
- Playmats might be creased from shipping. You can flatten your playmats by:
- 1. Placing a towel or thick sheet over the playmat.
- 2.Using an iron on medium or low settings to iron out the wrinkles.(Don't iron the playmats directly,use the iron on the sheet or towel.)
- 3. Make sure to iron the edges of the playmat as wellto flatten them.


SAFETY WARNINGS


- After assembly, tighten all screws and bolts every 4-6 months.
- This table contains SMALL PARTS-Keep children under 3years old AWAY from the table at all times!
- ·Maximum table load is 40kg(88lbs)
- ·Maximum table load of table with Bar Height Extenders is 30kg(66|bs).
- For best care, keep product out of direct sunlight and in an environment between 19- 29° C (66-84°F).
- To clean wood, use a sligh+ly damp cloth.
- ·Do not use product if the environmental temperature is under 5° C(41F)or over 35° C (95°F)
- ·Parts of product have been treated, coated and/or polished, but do not use product any parts contain rust or jagged edges.
- ·Keep metal surfaces dry,and dry immediately if wet.

1:Prepare the Components Step

Required components:


- 1.wooden cover panels ×3
- 2. Table frame x1
- 3.Table legs ×4
- 4. Bottom panels x3
- 5. The cup frame x4
- 6.Screws ×20
- 7.Cam bolt x8
- 8.cam lock x8
- 9.Wrench ×1
- 10, Phillips screwdriver x1
- 11.Wood dowel x8
- 12. Cola cup x4
- 13.Metal rod x1
- 14. Playmats x1

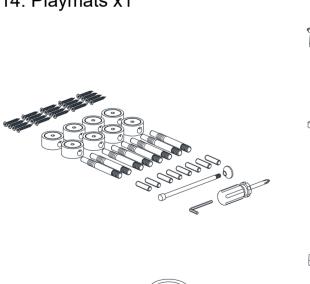

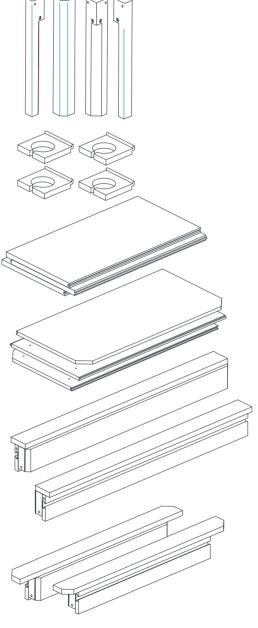


Step 2:Pre-install the Cam bolt and wood dowel

- ·Take one table leg and insert 1 cam bolt into the holes on the leg with screwdriver, insert 1 wood dowel into the wood dowel holes on the leg. Use the Screwdriver to tighten the cam bolt.
- ·Follow the same process to install the remaining 7 cam bolts and wood dowels into the other table legs.

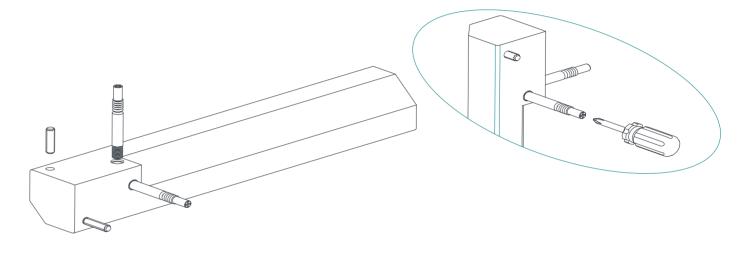


Step 3: Attach the Table Legs and Tighten the Cam locks


- ·Turn the tabletop upside down and place it flat on the ground.
- -Use the wrench to fully tighten the two cam locks in the hole, ensuring the leg is firmly fixed.
- •Repeat the same process for the other three table legs, aligning them with the triangular holes on the tabletop, use the wrench to tighten all cam lock securely.

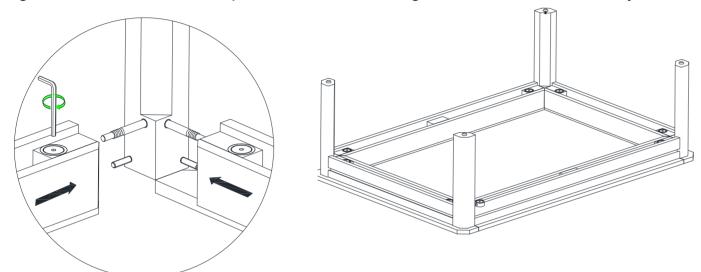

Step 4:Install the Bottom Panels


·Place the three bottom panels into the recessed slots on the tablebottom, Use the screwdriver to tighten all screwes.

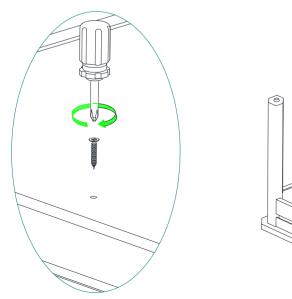


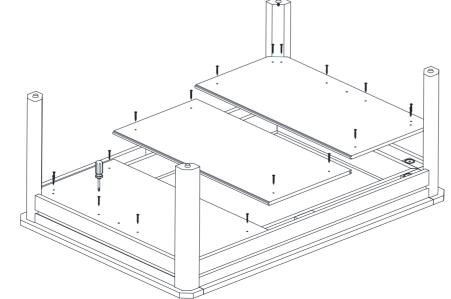



Step 5:Install the Top Accessories


•Once all the legs are secured, flip the table upright so the tabletop is facing up. Insert the metal rod into the designated hole on one side of the tabletop, from underneath the table, tighten the nut on the metal rod's thread to secure it.

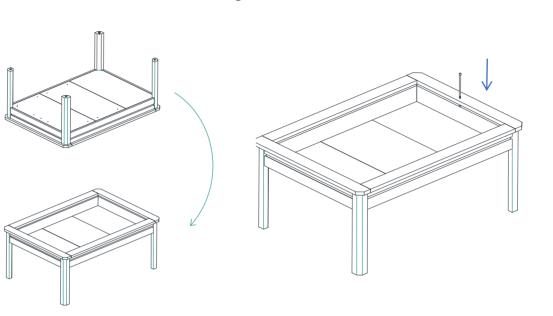



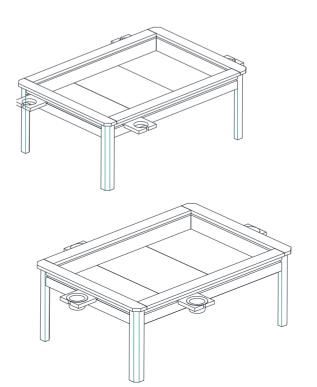

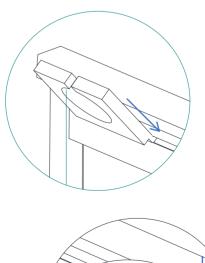

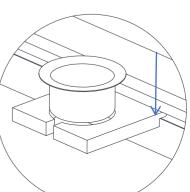

Step 6:Complete the Assembly

•Place the paymats and three wooden cover panels into the recessed slots on the tabletop,assem-bly is now complete!

